




# Olympus Stylus 410 Teardown

Written By: Rory Aronson

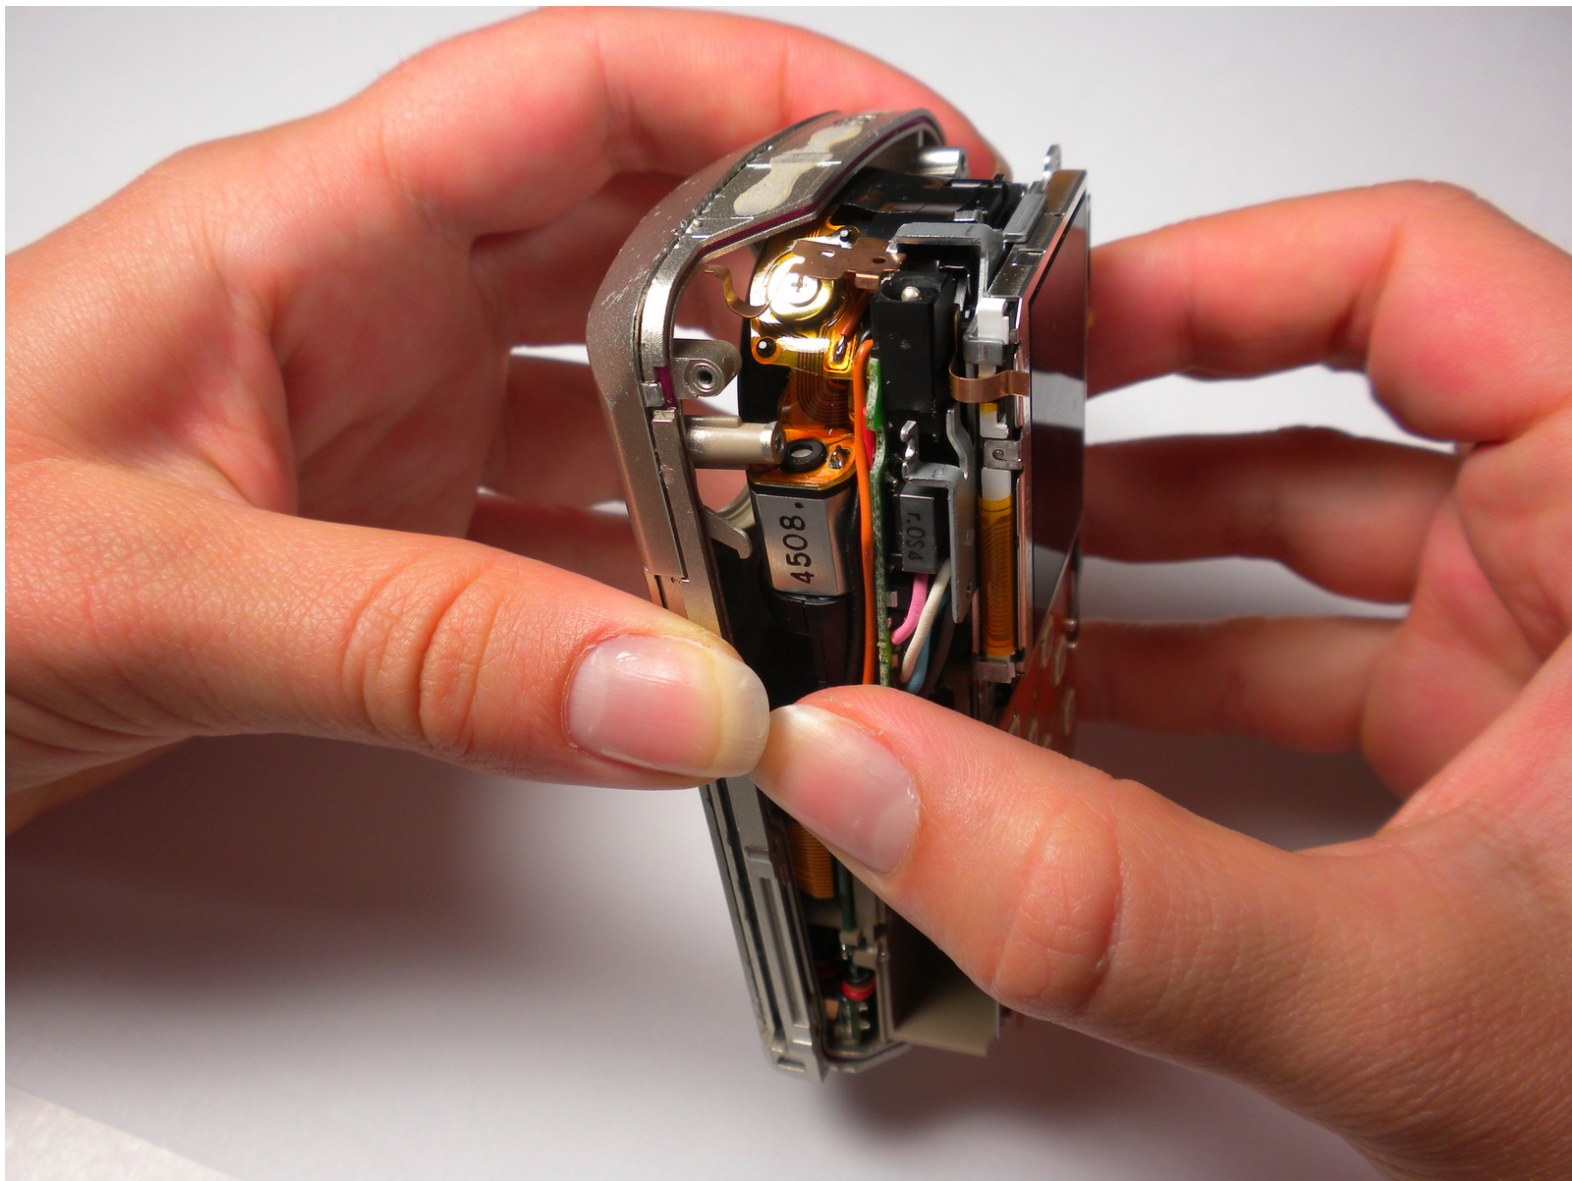

## INTRODUCTION


This guide will show you how to completely teardown your camera.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Slider

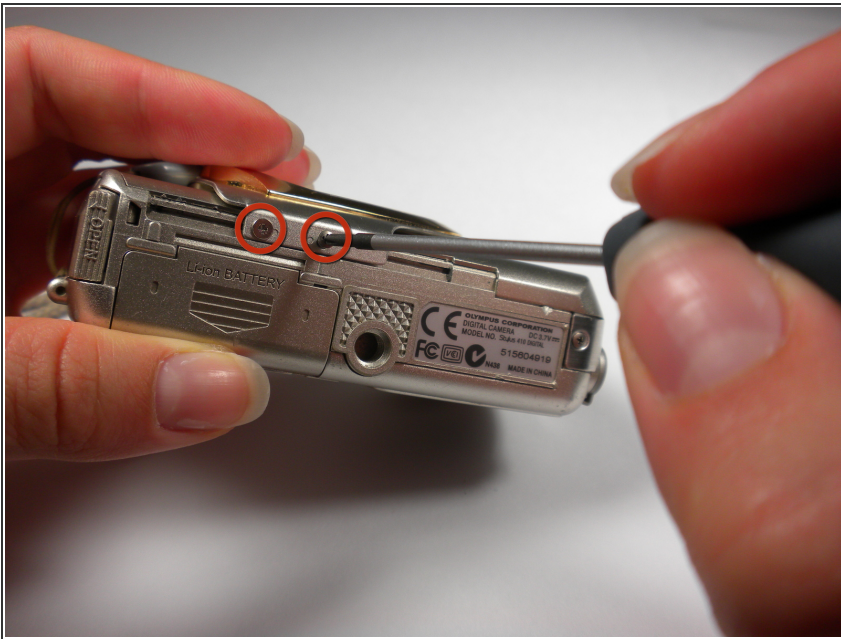

- Locate the 2 screws on the bottom of the slider.
- Remove both screws with a #00 Phillips screwdriver.

## Step 2



- Gently pull on the bottom of the slider until it comes off the lower track.
- There is a little piece that connects the slider to the track. Be sure not to lose this as it is needed to put the slider back on.



## Step 3



- Lift the slider up until it comes off the upper track.


## Step 4



- The slider should now be free from the body of the camera.




## Step 5 — Outer Case

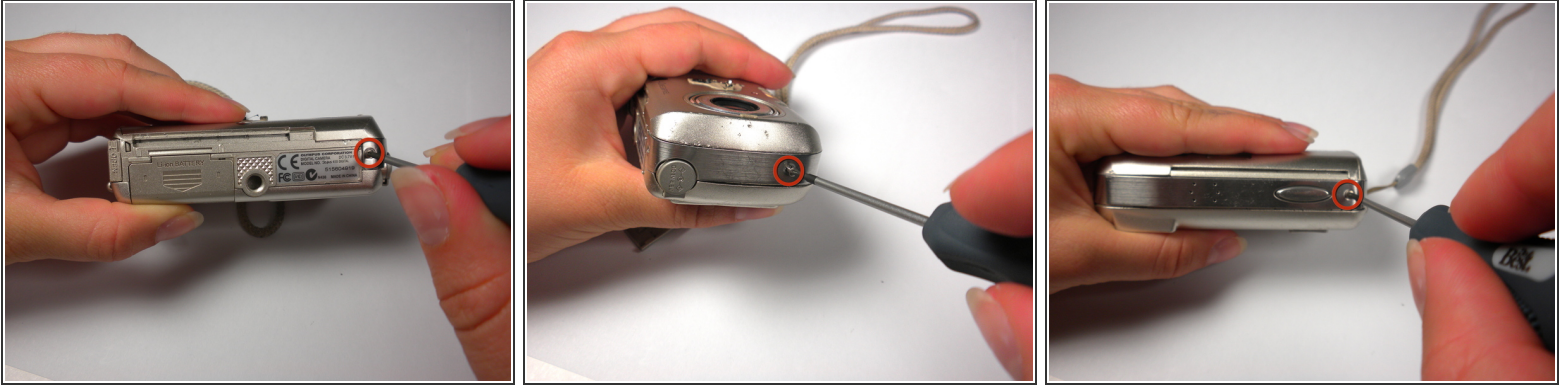

- Locate the 3 screws on the outer metal band and remove them with a #00 Phillips screwdriver.

## Step 6

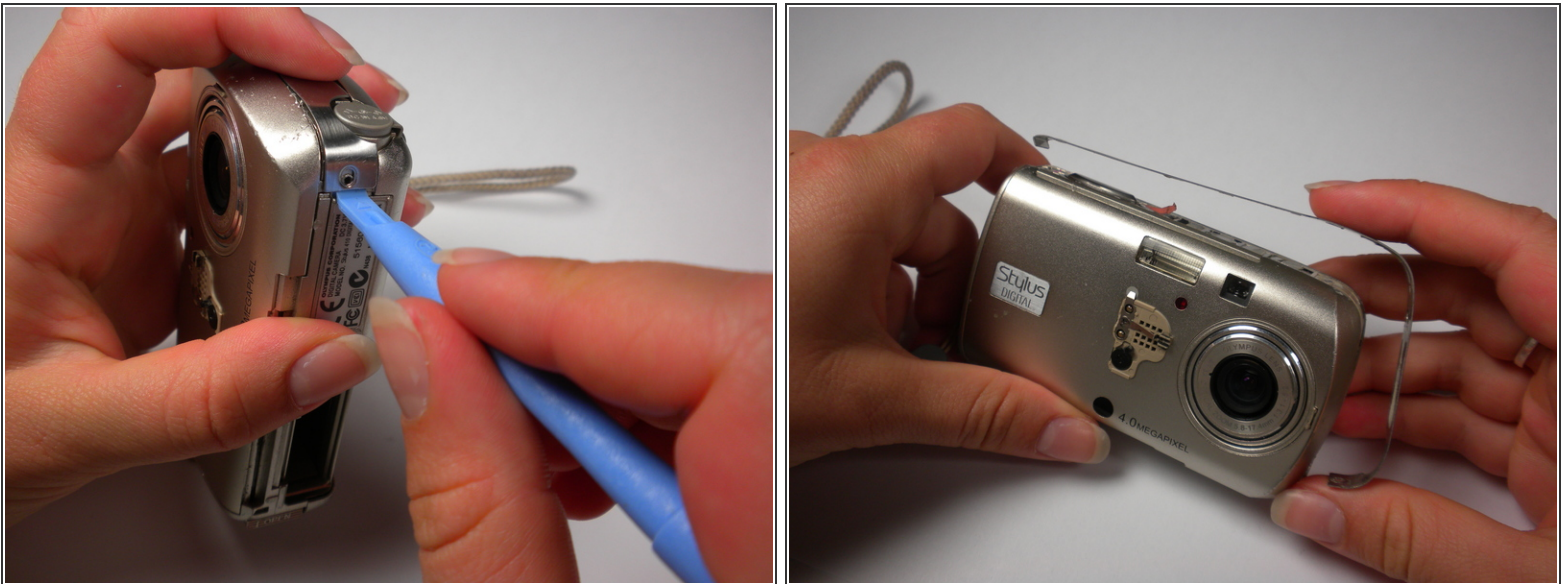

- Use the spudger to peel off the outer metal band, starting from the bottom of the camera.

⚠ The metal band is attached to the camera with glue in addition to screws. Be careful not to bend the band when removing it from the camera.

## Step 7



- The shutter button can now be removed. It is not connected to the camera and can be lifted off.


## Step 8



- Remove the memory card.
- Locate and remove the 2 screws using a #00 Phillips screwdriver.




## Step 9

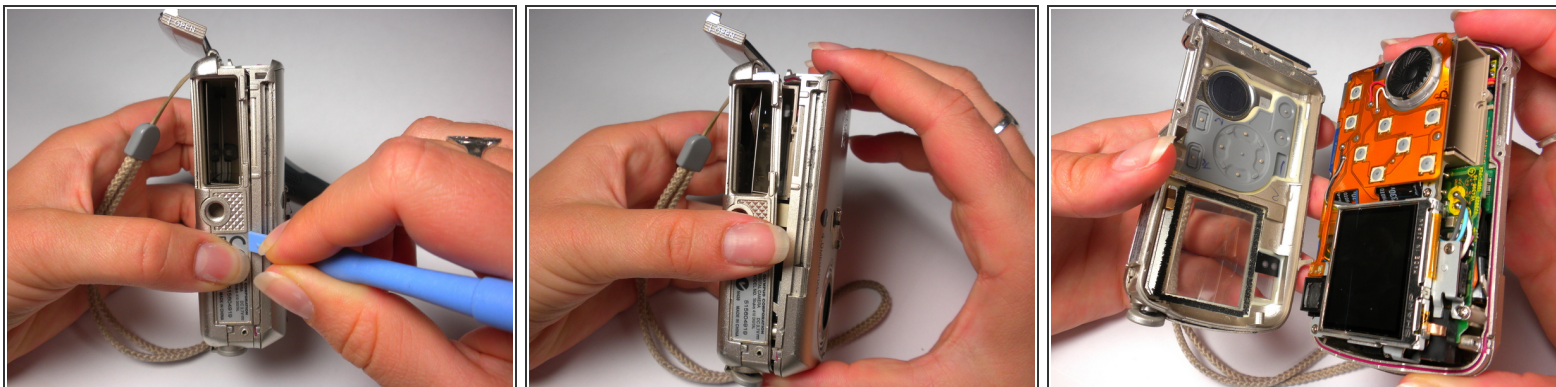

- Use a spudger around the edge of the case to loosen it.
- Carefully wiggle the back case off. This may require a fair amount of force.



## Step 10

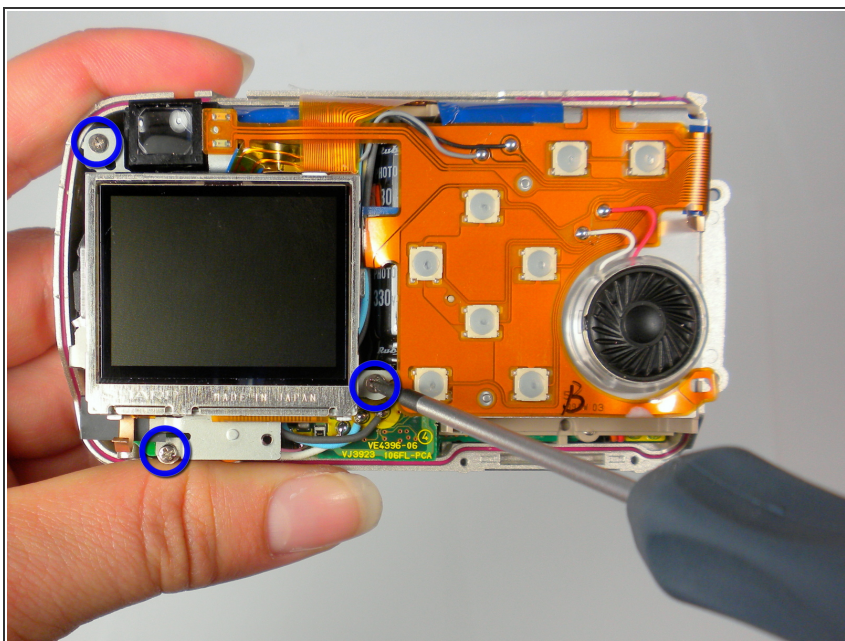

- Locate the 3 internal screws holding on the front of the case. Remove them with a #00 Phillips screwdriver.





## Step 11

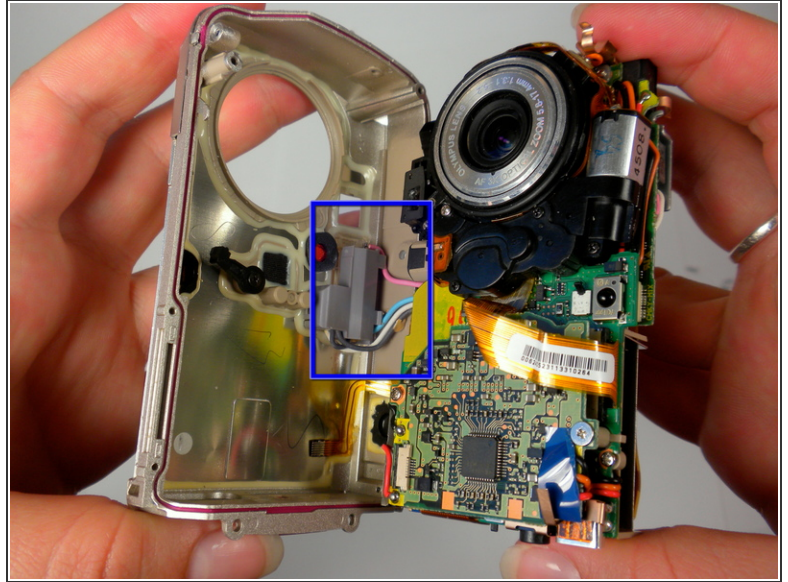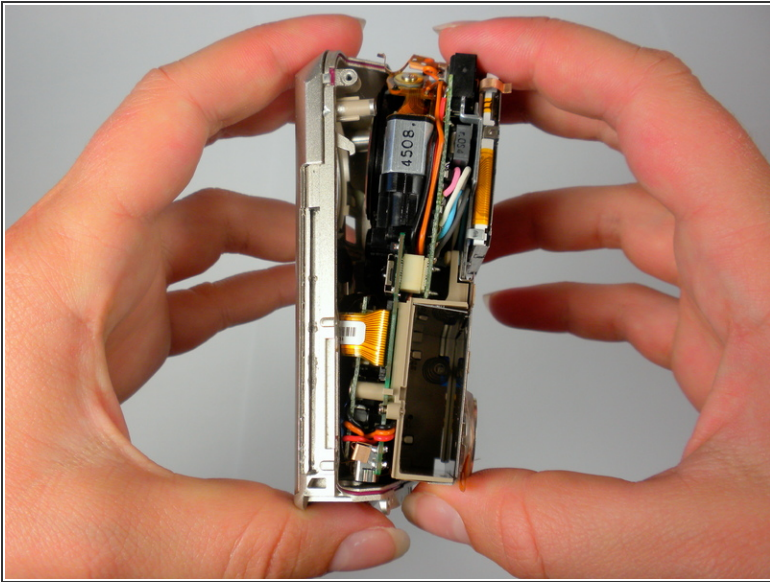



- While grasping the interior and the front case, gently pull until they start to come apart. Some light wiggling may be required.
- Be careful not to completely pull the front case off because it will still be connected with wires.

## Step 12 — Flash

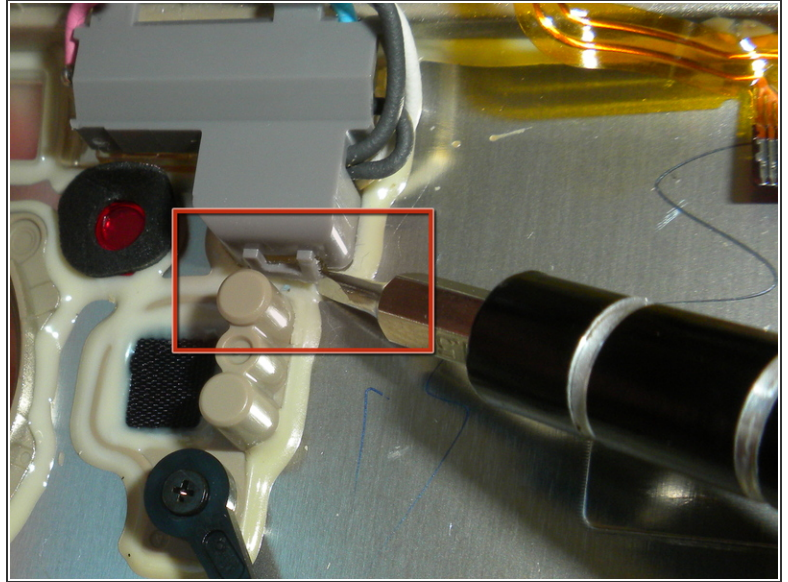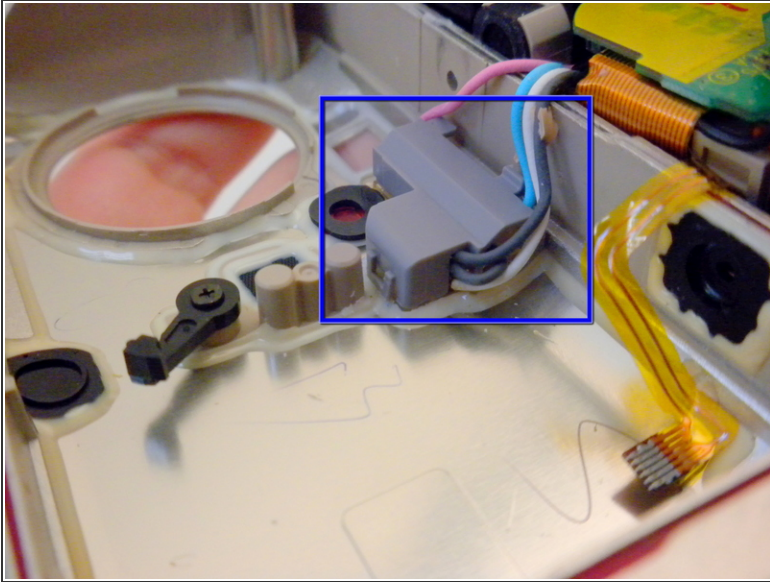

- Locate the gray compartment covering the flash.
- Position your flat head screw driver or small spudger underneath the tab that is keeping the gray cover on.
- Gently lift the tab so the gray compartment becomes free.


## Step 13

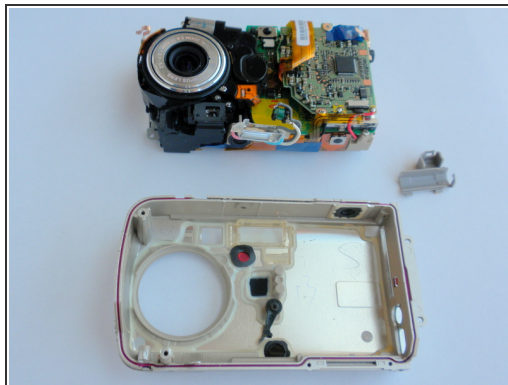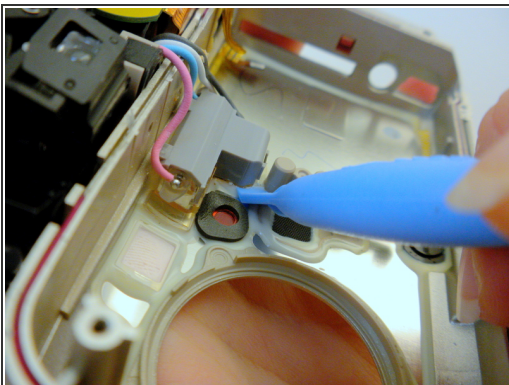

- Use the spudger around the perimeter of the gray compartment to detach it from the front case.
- The gray compartment can now be removed from the flash unit.
- The flash unit can now be removed, and a new one soldered back on.




## Step 14 — Battery Cover

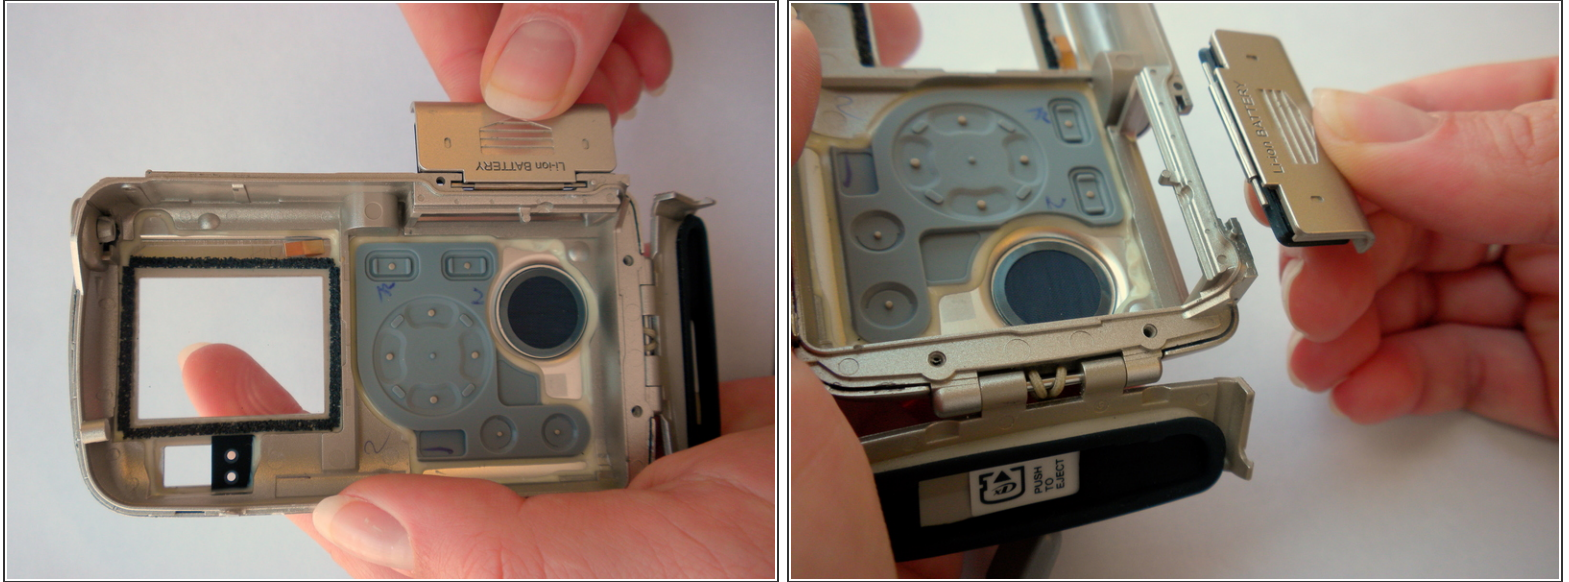

- Open the battery cover and lift it up and off of back camera case.



## Step 15

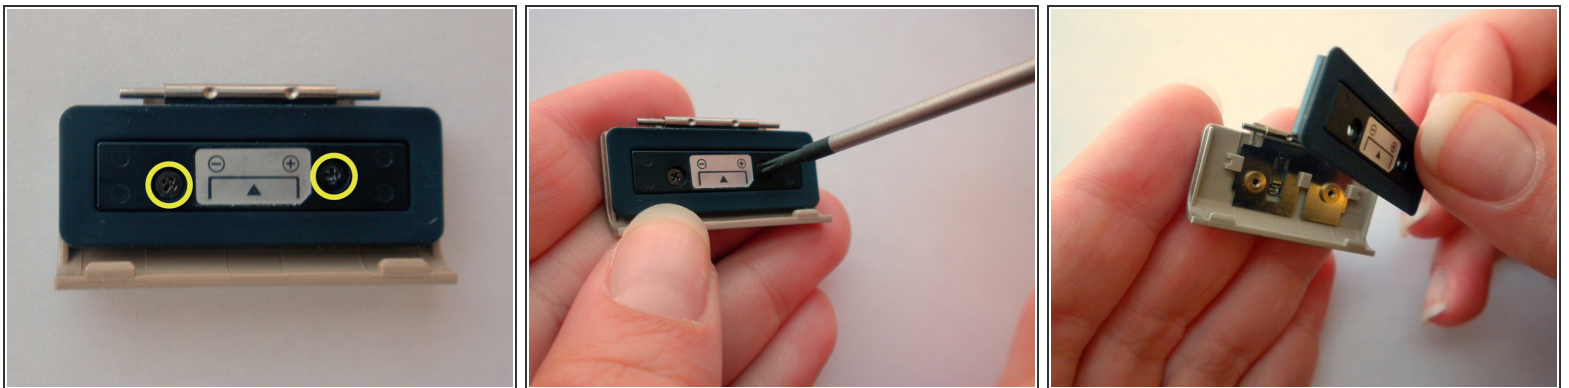

- Locate and unscrew the 2 screws with a #00 Phillips screwdriver.
- Remove the black seal.




## Step 16

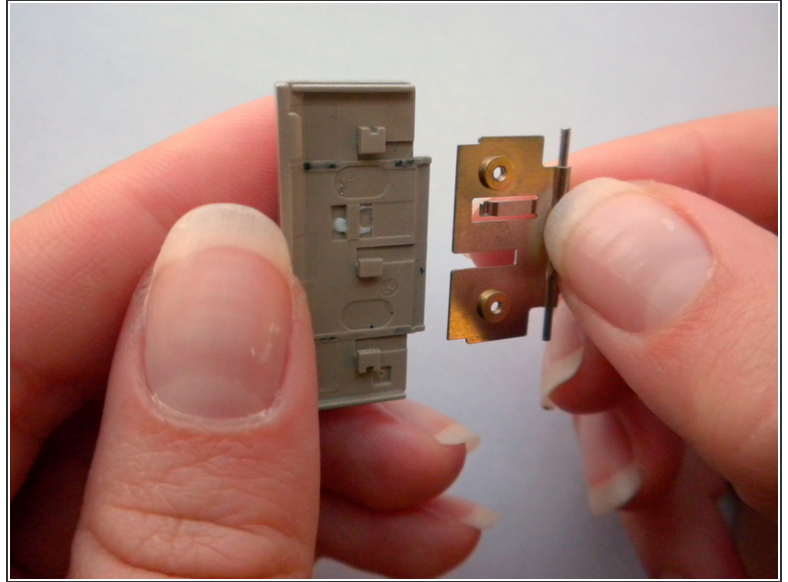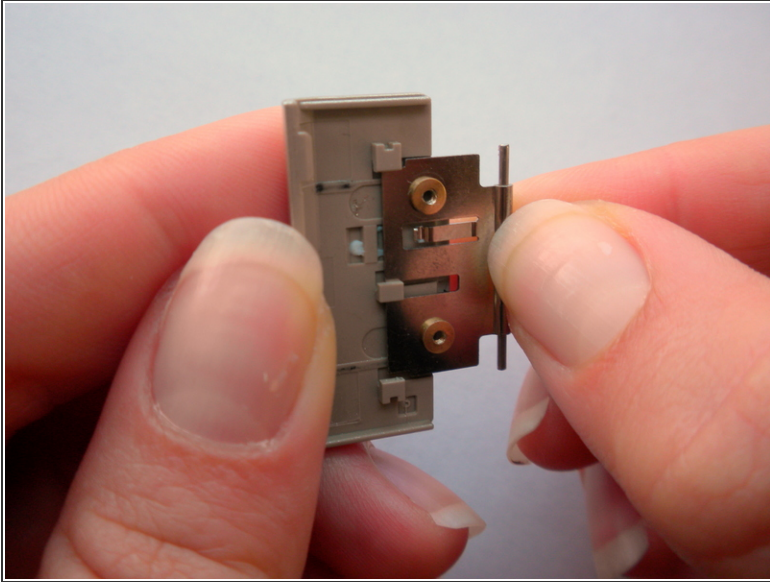




- Slide the metal piece off of the battery cover.

## Step 17

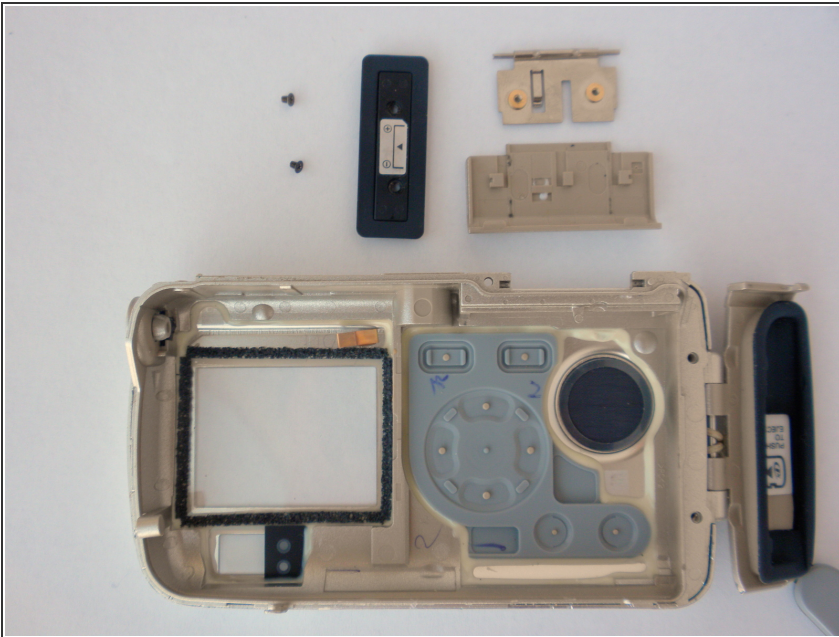




- This is what the battery cover and back case look like completely disassembled.

## Step 18 — LCD Screen

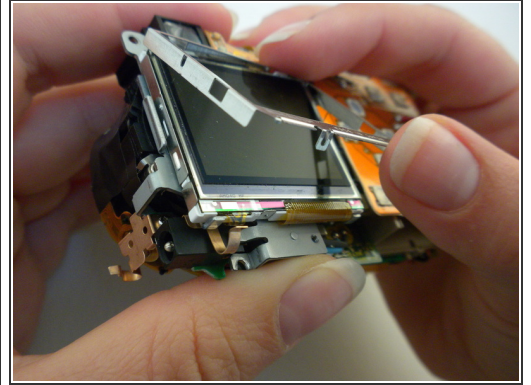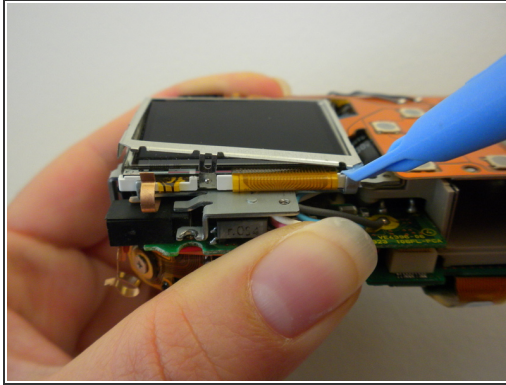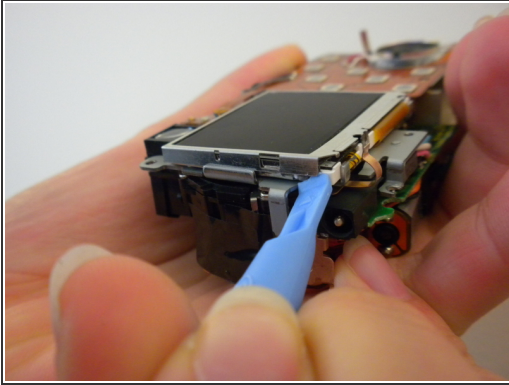

- Remove the metal frame from the LCD screen using a spudger.

## Step 19

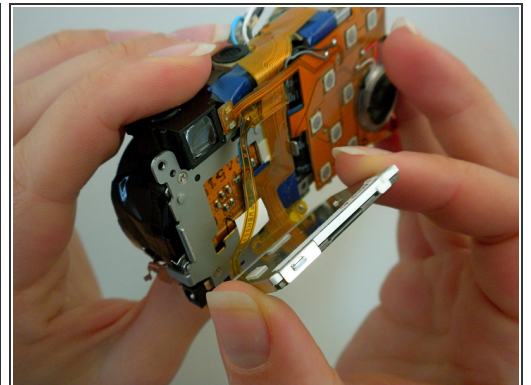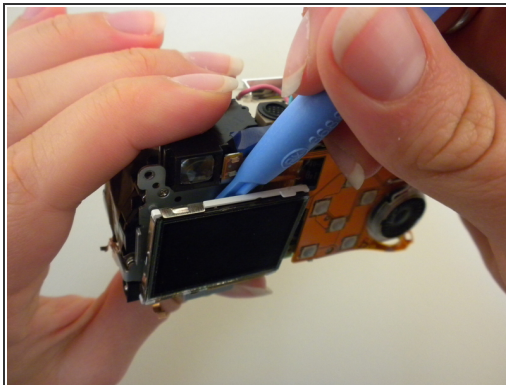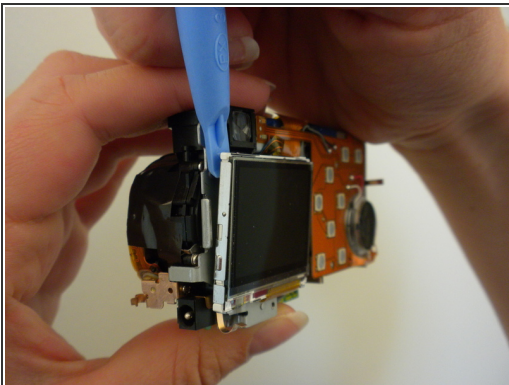


- Pry off the LCD screen from the top using a spudger. The screen will not be completely free from the device because of a ribbon.

 Do not pull the screen completely off because it will still be held on by two ribbon cables.



## Step 20

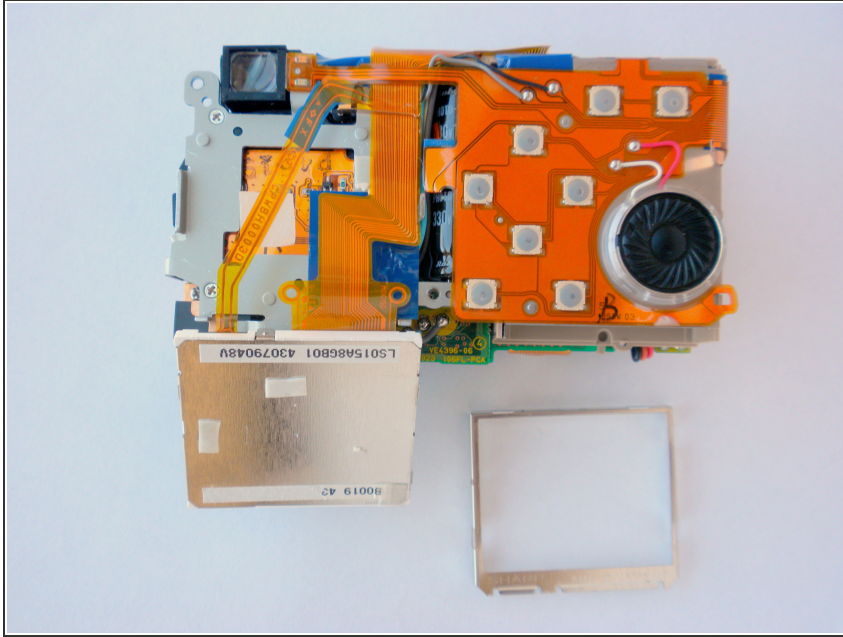

- This is what the camera will look like now that the LCD screen is removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 06:51:57 PM.